

| SMOKE DETECTION PANEL XL No.4 SCHEDULE 'A' (SINGLE ADDRESS INPUTS) | | | | | | |
|--|---------------------|-----------------------------|--|------------------|--|---|
| INPUT | | OUTPUT | | | | |
| ADDRESS | INITIATING DEVICES | ANNUNCIATOR MESSAGES | | ACTIVATED RELAYS | ACTIVATED HVAC EQUIPMENT | |
| 041101 | AREA SMOKE DETECTOR | E-7-18 AREA ALARM TOWER I | | POX-29-112 | E-7-18 SHUTDOWN | |
| 041102 | AREA SMOKE DETECTOR | ACS-7-11 AREA ALARM | | POX-21-034 | ACS-7-11 | |
| 041103 | DUCT SMOKE DETECTOR | ACS-7-11 DUCT ALARM | | | | |
| 041104 | DUCT SMOKE DETECTOR | ACS-7-4 AREA ALARM | | POX-20-021 | ACS-7-4 | |
| 041105 | AREA SMOKE DETECTOR | ACS-7-4 DUCT ALARM | | | | |
| 041106 | DUCT SMOKE DETECTOR | ACS-7-8 AREA ALARM | | POX-21-031 | ACS-7-8 | |
| 041107 | AREA SMOKE DETECTOR | ACS-7-8 DUCT ALARM | | | | |
| 041108 | DUCT SMOKE DETECTOR | ACR-7-10 DUCT ALARM | | POX-26-082 | ACR-7-10 | |
| 041109 | DUCT SMOKE DETECTOR | ACR-7-8 DUCT ALARM | | POX-21-034 | ACS-7-11 | |
| 041110 | DUCT SMOKE DETECTOR | ACR-7-7 DUCT ALARM | | GROUP A | GROUP A | |
| 041111 | DUCT SMOKE DETECTOR | E-7-21 DUCT ALARM | | | | |
| 041112 | DUCT SMOKE DETECTOR | SMOKE IN TEL CLOS 9 SW | | POX-30-121 | E-7-21 | |
| 041113 | AREA SMOKE DETECTOR | SMOKE IN SUB 7S | | SPX-13-014 | ALARM STATIONS | |
| 041114 | AREA SMOKE DETECTOR | | | | | |
| 041115 | AREA SMOKE DETECTOR | | | | | |
| 041116 | AREA SMOKE DETECTOR | | | | | |
| 041117 | MANUAL PULL STATION | PULL STATION IN SUB 7S | | | | |
| 041118 | MANUAL PULL STATION | | | | | |
| 041119 | MANUAL PULL STATION | | | | | |
| | | | | | | |
| 041201 | AREA SMOKE DETECTOR | ACS-7-10 AREA ALARM TOWER I | | POX-21-033 | ACS-7-10 SHUTDOWN | |
| 041202 | DUCT SMOKE DETECTOR | ACS-7-10 DUCT ALARM | | | | |
| 041203 | AREA SMOKE DETECTOR | ACS-7-3 AREA ALARM | | POX-19-014 | ACS-7-3 | |
| 041204 | DUCT SMOKE DETECTOR | ACS-7-3 DUCT ALARM | | | | |
| 041205 | AREA SMOKE DETECTOR | ACS-7-7 AREA ALARM | | POX-20-024 | ACS-7-7 | |
| 041206 | DUCT SMOKE DETECTOR | ACS-7-7 DUCT ALARM | | | | |
| 041207 | AREA SMOKE DETECTOR | ACS-7-12 AREA ALARM | | POX-22-041 | ACS-7-12 | |
| 041208 | DUCT SMOKE DETECTOR | ACS-7-12 DUCT ALARM | | | | |
| 041209 | DUCT SMOKE DETECTOR | ACR-7-6 DUCT ALARM | | GROUP A | GROUP A | |
| 041210 | DUCT SMOKE DETECTOR | ACR-7-5 DUCT ALARM | | | | |
| 041211 | DUCT SMOKE DETECTOR | ACR-7-11 DUCT ALARM | | POX-26-083 | ACR-7-11 | |
| 041212 | DUCT SMOKE DETECTOR | SMOKE IN TEL CLOS 9 SE | | POX-22-041 | ACS-7-12 | |
| 041213 | AREA SMOKE DETECTOR | | | GROUP A | POX-25-071 POX-25-072 POX-25-073 POX-25-074 POX-19-014 POX-20-021 POX-20-024 POX-21-031 POX-21-033 | ACR-7-5 SHUTDOWN ACR-7-6 ACR-7-7 ACR-7-8 ACS-7-3 ACS-7-4 ACS-7-7 ACS-7-8 ACS-7-10 |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| 041301 | AREA SMOKE DETECTOR | ACS-7-13 AREA ALARM TOWER I | | POX-22-042 | ACS-7-13 SHUTDOWN | |
| 041302 | DUCT SMOKE DETECTOR | ACS-7-13 DUCT ALARM | | | | |
| 041303 | AREA SMOKE DETECTOR | ACS-7-5 AREA ALARM | | POX-20-022 | ACS-7-5 | |
| 041304 | DUCT SMOKE DETECTOR | ACS-7-5 DUCT ALARM | | | | |
| 041305 | AREA SMOKE DETECTOR | ACS-7-1 AREA ALARM | | POX-19-012 | ACS-7-1 | |
| 041306 | DUCT SMOKE DETECTOR | ACS-7-1 DUCT ALARM | | | | |
| 041307 | AREA SMOKE DETECTOR | ACS-7-9 AREA ALARM | | POX-21-032 | ACS-7-9 | |
| 041308 | DUCT SMOKE DETECTOR | ACS-7-9 DUCT ALARM | | | | |
| 041309 | DUCT SMOKE DETECTOR | ACR-7-12 DUCT ALARM | | POX-26-084 | ACR-7-12 | |
| | | | | POX-22-042 | ACS-7-13 | |
| 041310 | DUCT SMOKE DETECTOR | ACR-7-1 DUCT ALARM | | GROUP B | GROUP B | |
| 041311 | DUCT SMOKE DETECTOR | ACR-7-2 DUCT ALARM | | | | |
| 041312 | DUCT SMOKE DETECTOR | ACR-7-9 DUCT ALARM | | POX-21-032 | ACS-7-9 | |
| | | | | POX-26-081 | ACR-7-9 | |
| 041313 | DUCT SMOKE DETECTOR | E-7-20 DUCT ALARM | | POX-29-114 | E-7-20 | |
| 041314 | AREA SMOKE DETECTOR | SMOKE IN TEL CLOS 9 NW | | SPX-14-024 | ALARM STATIONS | |
| 041315 | AREA SMOKE DETECTOR | | | | | |
| 041316 | AREA SMOKE DETECTOR | SMOKE IN SUB 7N | | | | |
| 041317 | AREA SMOKE DETECTOR | | | | | |
| 041318 | MANUAL PULL STATION | PULL STATION IN SUB 7N | | | | |
| 041319 | MANUAL PULL STATION | | | | | |
| 041320 | MANUAL PULL STATION | | | | | |
| | | | | | | |
| 041401 | AREA SMOKE DETECTOR | ACS-7-6 AREA ALARM TOWER I | | POX-20-023 | ACS-7-6 SHUTDOWN | |
| 041402 | DUCT SMOKE DETECTOR | ACS-7-6 DUCT ALARM | | | | |
| 041403 | AREA SMOKE DETECTOR | ACS-7-2 AREA ALARM | | POX-19-013 | ACS-7-2 | |
| 041404 | DUCT SMOKE DETECTOR | ACS-7-2 DUCT ALARM | | | | |
| 041405 | AREA SMOKE DETECTOR | ACS-7-14 AREA ALARM | | POX-22-043 | ACS-7-14 | |
| 041406 | DUCT SMOKE DETECTOR | ACS-7-14 DUCT ALARM | | | | |
| 041407 | DUCT SMOKE DETECTOR | ACS-7-14 DUCT ALARM | | | | |
| 041408 | DUCT SMOKE DETECTOR | ACS-7-14 DUCT ALARM | | | | |
| 041409 | DUCT SMOKE DETECTOR | ACR-7-3 DUCT ALARM | | GROUP B | GROUP B | |
| 041410 | DUCT SMOKE DETECTOR | ACR-7-4 DUCT ALARM | | | | |
| 041411 | DUCT SMOKE DETECTOR | ACR-7-13 DUCT ALARM | | POX-22-043 | ACS-7-14 | |
| | | | | POX-27-091 | ACR-7-13 | |
| 041412 | DUCT SMOKE DETECTOR | E-7-19 DUCT ALARM | | POX-29-113 | E-7-19 | |
| 041413 | DUCT SMOKE DETECTOR | E-7-17 DUCT ALARM | | POX-29-111 | E-7-17 | |
| 041414 | AREA SMOKE DETECTOR | SMOKE IN TEL CLOS 9 NE | | GROUP B | POX-24-061 POX-24-062 POX-24-063 POX-24-064 POX-19-012 POX-19-013 POX-20-022 POX-20-023 POX-21-032 | ACR-7-1 SHUTDOWN ACR-7-2 ACR-7-3 ACR-7-4 ACS-7-1 ACS-7-2 ACS-7-5 ACS-7-6 ACS-7-9 |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| | | | | | | |
| 042101 | TAMPER SWITCH | TAMPER SWITCH 7 MER TWR I | | N/A | N/A | |
| 042102 | WATER FLOW SWITCH | WATER FLOW 7 MER | | N/A | N/A | |
| 042103 | PURGE SWITCH 7 NE | BY-PASS ACTIVATED 7NE | | N/A | N/A | |
| 042104 | PURGE SWITCH 7 NW | BY-PASS ACTIVATED 7NW | | N/A | N/A | |
| 042105 | PURGE SWITCH 7 SE | BY-PASS ACTIVATED 7SE | | N/A | N/A | |
| 042106 | PURGE SWITCH 7 SW | BY-PASS ACTIVATED 7SW | | N/A | N/A | |

| SMOKE DETECTION PANEL XL No.4 SCHEDULE 'B' | | | | | |
|--|---------------|--|-------------------|------------------------------------|--|
| INPUT | | | OUTPUT | | |
| ADDRESS No. 1 | ADDRESS No. 2 | INITIATING DEVICES | RESULTING ADDRESS | ANNUNCIATOR MESSAGES | ACTIVATED RELAYS |
| 041102 | 041103 | POX-31-133 INTERFACE MODULE TRX-2R-4-9 | 041129 | SOL VALVE ACS-7-11 TWR I | SPX-13-014 POX-21-034 |
| 041102 | 041104 | | | | |
| 041105 | 041106 | POX-31-131 INTERFACE MODULE TRX-2R-4-7 | 041130 | SOL VALVE DUMP 7 SOUTH TWR I | SPX-13-014 GRO-21-034 |
| 041107 | 041108 | | | | SPX-13-014 GRO-21-034 |
| 041201 | 041202 | | | | SPX-13-014 GRO-21-034 |
| 041203 | 041204 | | | | SPX-13-014 GRO-21-034 |
| 041205 | 041206 | | | | SPX-13-014 GRO-21-034 |
| 041207 | 041208 | POX-31-134 INTERFACE MODULE | 041230 | SOL VALVE ACS-7-12 TWR I | SPX-13-014 |
| 041207 | 041209 | TRX-2R-4-10 | | | POX-21-034 |
| GROUP C | | | | | POX-21-034 POX-21-034 POX-21-034 POX-21-034 POX-21-034 POX-21-034 POX-21-034 |
| GROUP D | | | | | |
| 041301 | 041302 | POX-32-141 INTERFACE MODULE TRX-2R-4-11 | 041329 | SOL VALVE ACS-7-13 TWR I | SPX-13-014 POX-21-034 |
| 041303 | 041304 | POX-31-132 INTERFACE MODULE TRX-2R-4-8 | 041330 | SOL VALVE DUMP 7 NORTH TWR I | SPX-13-014 GRO-21-034 |
| 041305 | 041306 | | | | SPX-13-014 GRO-21-034 |
| 041307 | 041308 | | | | SPX-13-014 GRO-21-034 |
| 041401 | 041402 | | | | SPX-13-014 GRO-21-034 |
| 041403 | 041404 | | | | SPX-13-014 GRO-21-034 |
| 041405 | 041406 | POX-32-142 INTERFACE MODULE | 041430 | SOL VALVE ACS-7-14 TWR I | SPX-13-014 |
| 041405 | 041107 | | | | TRX-2R-4-12 |
| 041405 | 041408 | | | | |
| GROUP D | | | | | POX-21-034 POX-21-034 POX-21-034 POX-21-034 POX-21-034 POX-21-034 |
| | | | | | |